

Parts 4.1

Introduction

- This illustrated parts list identifies the subassemblies and replaceable components for the Layton Remote Trax remotely controlled tractor. All components that can be separately identified are listed.

Parts Information

How to Order Parts

To insure promptness and accuracy in filling your order, the following information **MUST** be given.

1. Name and address of person or company to whom the invoice is to be sent.
2. Name, address and phone number where parts are to be sent.
3. Shipping instructions :(UPS,Truck,Air,etc.)
4. Transportation charges (prepaid or collect)
5. Your order number
6. Model number of the machine
7. Serial number of the machine
8. Quantity of part(s)
9. Part numbers
10. Description of parts

Buying Parts Not Manufactured By Layton Manufacturing Company.

Many parts purchased by Layton Manufacturing Company may look like standard parts, but are in fact manufactured to special tolerances, or special alloys, or have been specially heat treated; consequently, serious problems can arise if these facts are not realized and substandard parts are substituted unknowingly. We realize that in many cases it may be more convenient to buy stock parts direct, rather than through Layton Manufacturing Company. We have identified these items in our parts list. However in the event of unsatisfactory performance resulting from the use of stock items not identified as such, Layton Manufacturing Company **WILL NOT** be held responsible.

Receipt of Parts

Layton Manufacturing Company defers responsibility for broken, lost or damaged goods, when upon delivery of the merchandise the transportation company from whom a receipt shows that the shipment was received in good condition. If any material is short and/or damaged, a notation should be on the carrier agent's bill.

Returning Parts

Permission to return parts or equipment **MUST** be received from Layton Manufacturing Company before returning parts. When requesting permission, itemize the parts and quantities to be returned and show the **INVOICE NUMBER AND DATE** of original purchase. Transportation charges **MUST** be **PREPAID**. Refer to Warranty Page, Limited Warranty and Limitation of Liability, for additional information.

Format

Component parts list are presented in 6 parts groups. Illustrations are accompanied by a 5 column reference chart.

Item

Index numbers found in this column correspond to the numbers found on the respective parts location illustration. Some items are illustrated primarily to show their orientation to other parts or systems.

Notes

This column identifies footnotes applicable to specified items.

Part Number

This column lists the Layton Manufacturing Company part number.

Qty

This column lists the total number of a specific item required per assembly or subassembly.

This number may not necessarily be the number of items used in the end item or system. Only one set of components is listed whenever the components of two or more assemblies are the same.

“A/R” (As Required) identifies bulk items whose length or other dimension must be specified when requisitioning.

“Ref” identifies items for reference purposes only.

“NSS” (not sold separately) identifies items which must be ordered as a set because they are closely mated at manufacture.

Description

This column lists the item nomenclature necessary to identify the item. Additionally, cross-reference for repairable subassemblies will be found in this column.

Group 1 Chassis

Main Hood	Page 4.3-4.4
Front Hood	Page 4.5-4.6
Middle Bulkhead	Page 4.7-4.9
Front Bulkhead	Page 4.10
Rear Bulkhead	Page 4.11
Frame Rails	Page 4.12-4.13
Junction Box	Page 4.14
Emergency Stop Switch	Page 4.15
Trailer Brake Cord Reel	Page 4.16
Toolbox	Page 4.17
Fuel reservoir	Page 4.18-4.19
Hydraulic Reservoir	Page 4.20-4.21
Winch	Page 4.22-4.24
Mast	Page 4.25

Group 2 Hydraulic

Hydraulic Lines	Page 4.27
Hydraulic Fittings	Page 4.28
Mast Cylinder	Page 4.29
Throttle Cylinder	Page 4.31
Auxiliary Manifold	Page 4.32
Dump Valve	Page 4.33
Junction Box	Page 4.34
Emergency Stop Switch	Page 4.35

Group 3 Electrical

Lights	Page 4.36
Beacon	Page 4.37
Emergency Stop Switch	Page 4.38
Wiring Diagram	Page 4.39-4.40

Group 4 Undercarriage

Track Chains	Page 4.41
Track Frame Assembly	Page 4.42-4.43
Bottom Rollers	Page 4.44
Top Rollers	Page 4.45
Idlers	Page 4.46
Yoke Assembly	Page 4.47

Group 5 Drive Train

Engine/Air Cleaner	Page 4.48-4.49
Exhaust/ Radiator/ Oil Cooler	Page 4.50
Drive Coupling	Page 4.51
Planetary Gearboxes	Page 4.52
Fuel Separator	Page 4.53

Accessories

Blade Assembly	Page 4.55-4.56
Blade Hydraulics	Page 4.57-4.58
Blade Angle Cylinder	Page 4.59
Blade Tilt Cylinder	Page 4.60